



850-20


Place this manual with personnel responsible for maintenance of this valve

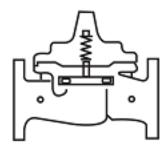

Installation

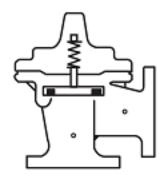

Operation

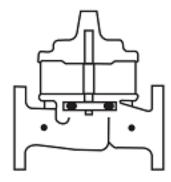

Maintenance



CVCL 1 (2) 3 4 DIST. CODE 002 SHEET 1 OF CATALOG NO. DRAWING NO. REV. 09-05-13 NEWPORT BEACH, CALIFORNIA 850 - 20203182 В TYPE OF VALVE AND MAIN FEATURES
PRESSURE RELIEF VALVE
FOR FIRE PUMP SERVICE DESIGN DRAWN ΑK 07-08-02 CHK'D 7-10-02 ٧L PMC (SEA WATER SERVICE) 짬 APV'D CH 7-11-02 NOT FURNISHED BY CLA-VAL CO. — — — OPTIONAL FEATURES (ECO LIST COMPONENT 19311 DRAIN TO /i\ ATMOSPHERE ၀ (EC0 CRL60 ADDED WAS œ **INLET** OUTLET -08 0 A. K 굺 REVISE MANUALLY ITEM H: ITEM 47184) ITEM NO. BASIC COMPONENTS QTY NOT 100-43 TDV MAIN VALVE 8 2 CRL/CRL60 PRESSURE RELIEF CONTROL 1 ADDED 3 X44A STRAINER AND ORIFICE ASSEMBLY 1 4 GAGE CONNECTION 1 REVISION RECORD PRODUCTION VALVE CHECK FOR ADDED TO CATALOG NUMBER OPTIONAL FEATURE SUFFIX CAD 9 Н DRAIN TO ATMOSPHERE RELEASED ∞

| | | | | | CVCL 1 ② 3 4 DIST. CODE 002 | SHE | ET 2 OF | | | | | |
|--|---------|-------------|----------------|---------|---|------------|--|-----------------------|--|--|--|--|
| | | | | | GLA-VAL GO , NEWPORT BEACH, CALIFORNIA 850—20 | DRAWING NO | o. 03182 | REV. | | | | |
| | | | | TYPE OF | VALVE AND MAIN FEATURES | DESIGN | 70102 | | | | | |
| | | | | | PRESSURE RELIEF VALVE | DRAWN | AK | 07-08-02 | | | | |
| | + | + | \dashv | | FOR FIRE PUMP SERVICE (SEA WATER SERVICE) | CHK'D | VL | 7-10-02 | | | | |
| | | | ┟ | | (SEA WATER SERVICE) | APV'D | CH | 7-11-02 | | | | |
| | | | OPERATING DATA | | | | | | | | | |
| | | | | l. | PRESSURE RELIEF FEATURE: | | | | | | | |
| PRESSURE RELIEF CONTROL (2) IS A NORMALLY CLOSED CONTROL THAT FOR MAIN VALVE INLET PRESSURE CHANGES. AN INCREASE IN INLET PRESS TO OPEN CONTROL (2) AND A DECREASE IN INLET PRESSURE TENDS TO CONTROL (2), THIS CAUSES LOADING CHAMBER PRESSURE TO VARY AND VALVE MODULATES (OPENS AND CLOSES) MAINTAINING A RELATIVELY CON PRESSURE AT THE MAIN VALVE INLET. WHEN INLET PRESSURE IS LOWER TO SET POINT OF CONTROL (2), CONTROL (2) CLOSES. THIS PRESSURIZES TO CHAMBER AND THE MAIN VALVE CLOSES. PRESSURE RELIEF CONTROL (2) TURN THE ADJUSTING SCREW CLOCKWISE TO INCREASE THE SETTING. | | | | | | | SURE TEN CLOSE THE MAI NSTANT THAN THI THE LOAD | NDS N E DING | | | | |
| | | | | II. | OPTIONAL FEATURE OPERATING DATA: | | | | | | | |
| | | | ╝ | | SUFFIX H (ATMOSPHERIC DRAIN) | | | | | | | |
| | | | ╝ | | PILOT SYSTEM DRAIN LINE IS DISCHARGED TO ATMOSPHERE. [PILOT SCONNECTED TO THE MAIN VALVE OUTLET BOSS IF SUFFIX (H) IS | | | | | | | |
| | | SPECIFIEL | <i>)</i>] | | | | | | | | | |
| | DAIE | | | III. | CHECK LIST FOR PROPER OPERATION: | | | | | | | |
| ľ | 1 | | Ш | | () SYSTEM VALVES OPEN UPSTREAM AND DOWNSTREAM. | | | | | | | |
| | <u></u> | + | 1 | | () AIR REMOVED FROM MAIN VALVE LOADING CHAMBER AND PIL AT ALL HIGH POINTS. | SYS TC | STEM | | | | | |
| | 7 | + | \dashv | | () PERIODIC CLEANING OF STRAINER (3) IS RECOMMENDED. | | | | | | | |
| CAD REVISION | | SEE SHEET 1 | | | () TEMODIO GEENNINO GI SINVAINEN (S) IS NEGOMMENDED. | | | | | | | |
| _ | 틹 | | ⅃Ĺ | | | | | | | | | |



800 Series

Tubular Diaphragm Valve






- · Low Head Loss
- · Cast Steel Construction
- · Fusion Coated Epoxy Inside and Out
- · Anti-Cavitation Design
- Nickel Aluminum Bronze Construction Option (Alloy C95800)
- Duplex Stainless Steel Construction Option (Alloy 2205)
- Low Maintenance
- · Simple and Reliable Operation
- 1-Year Warranty

The Cla-Val Model 100-43 Tubular Diaphragm Valve is a pressure-operated, in-line axial valve. A tube diaphragm actuates the valve, which is comprised of three major components: 1) Tube 2) Barrier and 3) Body. There is only one moving part in the valve — the tube diaphragm. There are no shafts, packing, stem guides or springs.

The tube diaphragm is a one piece, homogeneous nitrile rubber part which is extremely durable. The ends of the tube are thick solid rubber, designed to fit between mating flanges. This design eliminates the possibility of cutting the tube diaphragm due to over tightening or piping misalignment during installation.


The tube forms a drip tight seal around the barrier when the pressure is equalized between the valve inlet and the control chamber. When pressure is removed from the control chamber, the valve is open. The minimum recommended operating pressure is 40 P.S.I. of inlet pressure.

Principle of Operation

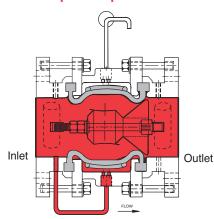

Full Open Operation


The valve opens when pilot set pressure is reached and pressure in the control chamber is relieved.

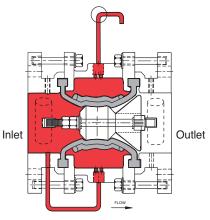

Tight Closing Operation

Water pressure (equal to inlet pressure) from valve inlet or from upstream of valve is applied to the control chamber.

Valve closes bubble tight.

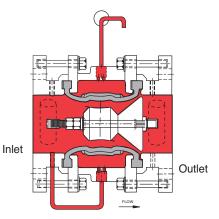

Modulating Action

The valve tube diaphragm holds any intermediate position when a quantity of water is exhausted from the control chamber via the pilot. The quantity of water in the control chamber is established by the "set pressure" of the pilot.

The control chamber is filled or exhausted to atmosphere, maintaining "set pressure."

MAIN VALVE Model 100-43

Ends: Flanged ANSI B16.5 (150lb Class) Body: Cast Steel (ASTM A216 WCB)

Tube Diaphragm: Nitrile Rubber Barrier: Urethane Bolts: 316 SS

Pressure: 250 psig (17.24 BAR) 32° F to 180° F Temp. Range: (0° C to 82.2° C)

MAIN VALVE OPTIONS

Body: Nickel Aluminum Bronze


> (Alloy C95800) or Duplex SS (Alloy 2205)

Note: For valve pilot assembly, only use the X43 "Y" Strainer,

NOT the X46A Flow Clean Strainer



Dimensions

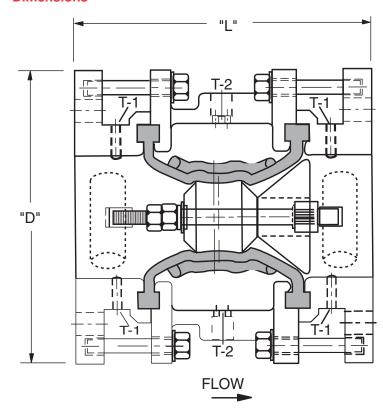

| Valve Size (Inches) | 3 | 4 | 6 | 8 | 10 |
|---------------------|------|------|-------|-------|-------|
| L | 8.75 | 9.75 | 10.75 | 11.75 | 14.00 |
| D | 7.5 | 9.50 | 11.75 | 14.00 | 16.44 |
| T-1 (NPT) | 0.25 | 0.25 | 0.25 | 0.38 | 0.50 |
| T-2 (NPT) | 0.25 | 0.50 | 0.50 | 0.50 | 0.50 |
| Approx. Wt. (Lbs.) | 67 | 99 | 135 | 185 | 270 |

| Valve Size (mm) | 80 | 100 | 150 | 200 | 250 |
|--------------------|------|------|------|------|------|
| L | 222 | 248 | 273 | 299 | 299 |
| D | 191 | 241 | 299 | 356 | 356 |
| T-1 (NPT) | 0.25 | 0.25 | 0.25 | 0.38 | 0.50 |
| T-2 (NPT) | 0.25 | 0.50 | 0.50 | 0.50 | 0.50 |
| Approx. Wt. (Kgs.) | 30 | 45 | 61 | 84 | 123 |

4". 6". 8" / 100. 150 and 200 mm Factory Mutual Approved (with approved Pilot Components)

| Flow Factors | | | | | |
|---------------------|----------|------|--|--|--|
| Size (inches/mm) | Cv (gpm) | KV | | | |
| 3"/80 mm | 160 | 36.4 | | | |
| 4"/ 100 mm | 340 | 77.3 | | | |
| 6"/150 mm | 885 | 201 | | | |
| 8"/200 mm | 1667 | 379 | | | |
| *10"/250 mm | 2424 | 550 | | | |

^{*} Calculated

When Ordering Please Specify:

1. Catalog No. 100-43

2. Valve Size 3. Fluid Being Handled 4. Fluid Temperature Range

5. Inlet Pressure Range

6. Outlet Pressure Range 7. Maximum Differential Pressure 8. Minimum Differential Pressure

9. Maximum Flow Rate

E-100-43 (R-12/2017)

CLA-VAL CANADA 4687 Christie Drive

Beamsville, Ontario Canada L0R 1B4 Phone: 905-563-4963 Fax: 905-563-4040 E-mail sales@cla-val.ca

CLA-VAL EUROPE

Chemin des Mésanges 1 CH-1032 Romanel/ Lausanne, Switzerland Phone: 41-21-643-15-55 Fax: 41-21-643-15-50 E-mail: cla-val@cla-val.ch CLA-VAL UK

Dainton House, Goods Station Road Tunbridge Wells Kent TN1 2 DH England Phone: 44-1892-514-400 Fax: 44-1892-543-423 F-mail: info@cla-val.co.uk

CLA-VAL 1701 Placentia Avenue · Costa Mesa CA 92627 800-942-6326 • Fax: 949-548-5441 • Web Site: cla-val.com • E-mail: info@cla-val.com

> CLA-VAL FRANCE Porte du Grand Lyon 1 ZAC du Champ du Périer France - 01700 Neyron Phone: 33-4-72-25-92-93 Fax: 33-4-72-25-04-17

E-mail: cla-val@cla-val.fr

CLA-VAL PACIFIC 45 Kennaway Road Woolston, Christchurch, 8023 New Zealand Phone: 64-39644860 www.cla-valpacific.com E-mail: info@cla-valpacific.com

cCOPYRIGHT CLA-VAL 2017 Printed in USA Specifications subject to change without notice



- MODEL - CRL

Pressure Relief Control

DESCRIPTION

The CRL Pressure Relief Control is a direct acting, spring loaded, diaphragm type relief valve. It may be used as a self-contained valve or as a pilot control for a Cla-Val Main valve. It opens and closes within very close pressure limits.

INSTALLATION

The CRL Pressure Relief Control may be installed in any position. The control body (7) has one inlet and one outlet port with a side pipe plug (24) at each port. These plugs are used for control connections or gauge applications. The inlet in the power unit body (6) is the sensing line port. A flow arrow is marked on the body casting.

OPERATION

The CRL Pressure Relief Control is normally held closed by the force of the compression spring above the diaphragm; control pressure is applied under the diaphragm.

When the controlling pressure exceeds the spring setting, the disc is lifted off its seat, permitting flow through the control.

When controlling pressure drops below spring setting, the spring returns the control to its normally closed position.

ADJUSTMENT PROCEDURE

The CRL Pressure Relief Control can be adjusted to provide a relief setting at any point within the range found on the nameplate.

Pressure adjustment is made by turning the adjustment screw (9) to vary the spring pressure on the diaphragm. Turning the adjustment screw clockwise increases the pressure required to open the valve. Counterclockwise decreases the pressure required to open the valve.

When pressure adjustments are complete the jam nut (10) should be tightened and the protective cap (1) replaced. If there is a problem of tampering, lock wire holes have been provided in cap and cover. Wire the cap to cover and secure with lead seal.

DISASSEMBLY

The CRL Pressure Relief Control does not need to be removed from the line for disassembly. Make sure that pressure shut down is accompanied prior to disassembly. If the CRL is removed from the line for disassembly be sure to use a soft jawed vise to hold body during work.

Refer to Parts List Drawing for Item Numbers.

- Remove cap (1), loosen jam nut (10) and turn adjusting screw counterclockwise until spring tension is relieved.
- Remove the eight screws (4) holding the cover (3) and powerunit body (6). Hold the cover and powerunit together and place on a suitable work surface. See NOTE under REASSEMBLY.
- Remove the cover (3) from powerunit body (6). The spring (12) and two spring guides (11).
- Remove nut (13) from stem (19) and slide off the belleville washer (14), the upper diaphragm washer (15) and the diaphragm (16).
- Pull the stem (19) with the disc retainer assembly (21) through the bottom of powerunit. The lower diaphragm washer (17) will slide off
- Remove jam nut (23) and disc retainer assembly (21) from stem. Use soft jawed pliers or vise to hold stem. The polished surface of stem must not be scored or scratched.
- The seat (22) need not be removed unless it is damaged. If removal is necessary use proper size socket wrench and turn counterclock

Note: Some models have an integral seat in the body (7).

INSPECTION

Inspect all parts for damage, or evidence of cross threading. Check diaphragm and disc retainer assembly for tears, abrasions or other damage. Check all metal parts for damage, corrosion or excessive wear.

REPAIR AND REPLACEMENT

Minor nicks and scratches may be polished out using 400 grit wet or dry sandpaper fine emery or crocus cloth. Replace all O-rings and any dam-

When ordering replacement parts, be sure to specify parts list item number and all nameplate data.

REASSEMBLY

In general, reassembly is the reverse of disassembly. However, the following steps should be observed:

- Lubricate the O-Ring (18) with a small amount of a good grade of waterproof grease, (Dow Corning 44 medium grade or equal). Use grease sparingly and install O-ring in powerunit body (6).
- 2. Install stem (19) in powerunit body (6). Use a rotating motion with minimum pressure to let stem pass through O-ring.

Do Not Cut O-Ring.


- 3. Install O-ring (5) at top of stem (19). Place lower diaphragm washer (17) on the stem with the serrated side up. Position diaphragm (16), upper diaphragm washer (15), with serration down, and belleville washer (14) with concave side down.
- 4. Position powerunit body (6) as shown on parts list drawing (top view).
- 5. Continue reassembly as outlined in disassembly steps 1 through 3.


Note: Item (4) Screw will have a quantity of 8 for the 0-75 and 20-200psi design and a quantity of 4 for the 100-300psi design. Item (25) Screw is used on the 100-300psi design only. Install item (25), before item (4) for preload of item (12) spring.

| SYMPTOM | PROBABLE CAUSE | REMEDY |
|---|--|---|
| Fails to open. | Controlling pressure too low. | Back off adjusting screw until valve opens. |
| Fails to open with spring compression removed. | Mechanical obstruction, corrosion, scale build-up on stem. | Disassemble, locate, and remove obstruction, scale. |
| Leakage from cover vent hole when con- trolling pressure is applied. | Diaphragm Damage | Disassembly replace damaged diaphragm. |
| | Loose diaphragm assembly. | Tighten upper diaphragm washer. |
| Fails to close. | No spring compression. | Re-set pressure adjustment. |
| Fails to close with spring compressed. | Mechanical obstruction. | Disassemble, locate and remove obstruction. |



1/2" & 3/4" PRESSURE RELIEF CONTROL (Bronze Body with 303SS Trim)

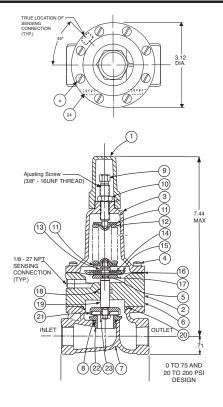

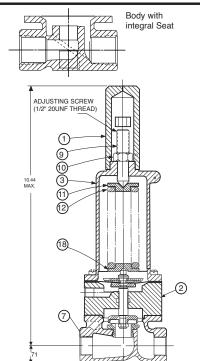

100 To 300 psi Design

| SIZE | SPR | RING | PART NUMBER | |
|---------------------------------|------------|--|----------------|--|
| 1/2" | 0-75 | PSI | 7922201E | |
| 1/2" | 20-10 | 5 PSI | 7922205F | |
| 1/2" | 20-20 | 0 PSI | 7922202C | |
| 1/2" | 100-30 | 00 PSI | 8280901D | |
| 3/4" | 0-75 | PSI | 7922901K | |
| 3/4" | 20-10 | 5 PSI | 7922903F | |
| 3/4" | 20-20 | 0 PSI | 7922902H | |
| 3/4" | 100-30 | 00 PSI | 8600501E | |
| For 250-600 PSI Contact Factory | | | | |
| CF Range | · - | X. INCREASE DR EACH VISE TURN OF | | |

| CRL Range PSI | APPROX. INCREASE FOR EACH CLOCKWISE TURN OF ADJUSTING SCREW |
|------------------|--|
| 0 to 75 | 8.5 PSI |
| 20 to 105 | 12.5 PSI |
| 20 to 200 | 28.0 PSI |
| 100 to 300 | 18.0 PSI |

When ordering parts please specify:

- 1. All Nameplate Data
- 2. Item Part Number
- 3. Item Description

| Item | Description | Material | Part Number | Part Number | Part Number | Part Number |
|------|-------------------------------------|----------|-------------|-------------|-------------|-------------|
| | · | | 0-75 | 20-105 | 20-200 | 100-300 |
| 1 | Cap | Plastic | 67628J | 67628J | 67628J | 1257601D |
| 2 | Nameplate | Brass | | | | |
| 3 | Cover | Bronze | C2544K | C2544K | C2544K | 44587E |
| 4* | Screw Fil. Hd. 10-32 x 1.88 (Qty 8) | 303 SS | 6757867E | 6757867E | 6757867E | 6757867E |
| 5* | O-Ring | Rubber | 00902H | 00902H | 00902H | 00902H |
| 6 | Body, Powerunit | Bronze | 7920504D | 7920504D | 7920504D | 7920504D |
| 7 | 1/2" Body | Bronze | C7928K | C7928K | C7928K | C7928K |
| | 3/4" Body | Bronze | C9083B | C9083B | C9083B | C9083B |
| 8* | O-Ring, Seat | Rubber | 00718H | 00718H | 00718H | 00718H |
| 9 | Screw, Adjusting | Brass | 7188201D | 7188201D | 7188201D | 82811B |
| 10 | Nut Hex (Locking) | 303 SS | 6780106J | 6780106J | 6780106J | 6780606H |
| 11 | Guide, Spring | 303 SS | 71881H | 71881H | 71881H | 1630301J |
| 12 | Spring | CHR/VAN | 71884B | 20632101E | 71885J | 1630201A |
| 13 | Nut, Stem Upper | Bronze | 73034B | 73034B | 73034B | 73034B |
| 14 | Washer, Belleville | Steel | 7055007E | 7055007E | 7055007E | 7055007E |
| 15 | Washer, Diaphragm (upper) | 303 SS | 71891G | 71891G | 71891G | 71891G |
| 16* | Diaphragm | Rubber | C1505B | C1505B | C1505B | C1505B |
| 17 | Washer, Diaphragm (lower) | 303 SS | 45871B | 45871B | 45871B | 45871B |
| 18* | O-Ring, Stem | Rubber | 00746J | 00746J | 00746J | 00746J |
| 19 | Stem | 303 SS | 8982401F | 8982401F | 8982401F | 8982401F |
| 20* | O-Ring, Body | Rubber | 00767E | 00767E | 00767E | 00767E |
| 21* | Retainer Assembly, Disc | 303 SS | C9158B | C9158B | C9158B | C9158B |
| 22 | Seat | 303Rub | 62187A | 62187A | 62187A | 62187A |
| 23 | Nut, Hex, Stem, Lower | Bronze | 6779806G | 6779806G | 6779806G | 6779806G |
| 24 | Pipe Plug | Bronze | 6784701C | 6784701C | 6784701C | 6784701C |
| | | | | | | |
| | FACTORY SET POINT | - | 50 PSI | 60 PSI | 60 PSI | 100 PSI |
| | REPAIR KIT* | | 9170007A | 9170007A | 9170007A | 9170007A |





X44A

Strainer and Orifice Assembly

BRONZE BODY — DELRIN ORIFICE

3/8" x 3/8"

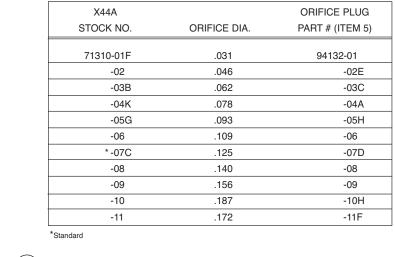

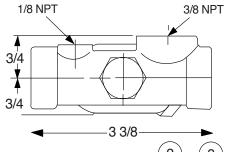

2 (3) (5) 7/8 0utlet (8) 2 1/4 MAX.

When ordering parts, please specify:

- · All Nameplate Data
- Item Number
- Description
- · Recommended Spare Parts

| ITEM | DESCRIPTION | MATERIAL | QTY. |
|------|-------------------------|-----------|------|
| 1 | Body | Red Brs. | 1 |
| 2 | Plug, Top | Brass | 1 |
| 3 | "O" Ring, Plug Top | Syn. Rub. | 1 |
| 4 | Screen | Monel | 1 |
| 5 | Orifice Plug | Delrin | 1 |
| 6 | Plug, Pipe | Brass | 1 |
| 7 | Strainer Plug | S.S. | 1 |
| 8 | "O" Ring, Strainer Plug | Syn. Rub. | 1 |



Cla-Val Product Identification

How to Order

Proper Identification


For ordering repair kits, replacement parts, or for inquiries concerning valve operation, it is important to properly identify Cla-Val products already in service by including all nameplate data with your inquiry. Pertinent product data includes valve function, size, material, pressure rating, end details, type of pilot controls used and control adjustment ranges.

Identification Plates


For product identification, cast-in body markings are supplemented by identification plates as illustrated on this page. The plates, depending on type and size of product, are mounted in the most practical position. It is extremely important that these identification plates are not painted over, removed, or in any other way rendered illegible.



This brass plate appears on altitude valves only and is found on top of the outlet flange.

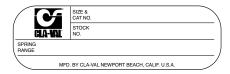


This tag is affixed to the cover of the pilot control valve. The adjustment range appears in the spring range section.

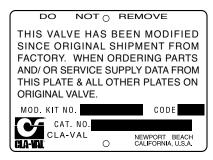

This aluminum plate is included in pilot system modification kits and is to be wired to the new pilot control system after installation.



This brass plate appears on valves sized 2¹/₂" and larger and is located on the top of the inlet flange.

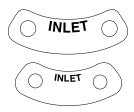

These two brass plates appear on ³/₈", ¹/₂", and ³/₄" size valves and are located on the valve cover.



These two brass plates appear on threaded valves 1" through 3" size or flanged valves 1" through 2". It is located on only one side of the valve body.



This brass plate is used to identify pilot control valves. The adjustment range is stamped into the plate.



This brass plate is used on our backflow prevention assemblies. It is located on the side of the Number Two check (2" through 10"). The serial number of the assembly is also stamped on the top of the inlet flange of the Number One check.



HOW TO ORDER

Because of the vast number of possible configurations and combinations available, many valves and controls are not shown in published product and price lists. For ordering information, price and availability on product that are not listed, please contact your local Cla-Val office or our factory office located at:

P. O. Box 1325 Newport Beach, California 92659-0325 (949) 722-4800 FAX (949) 548-5441

SPECIFY WHEN ORDERING

- Model Number
- · Globe or Angle Pattern
- Adjustment Range (As Applicable)
- · Valve Size
- Threaded or FlangedBody and Trim Materials
- Optional Features
- Pressure Class

UNLESS OTHERWISE SPECIFIED

- · Globe or angle pattern are the same price
- · Ductile iron body and bronze trim are standard
- · X46 Flow Clean Strainer or X43 "Y" Strainer are included
- CK2 Isolation Valves are included in price on 4" and larger valve sizes (6" and larger on 600 Series)

LIMITED WARRANTY

Automatic valves and controls as manufactured by Cla-Val are warranted for three years from date of shipment against manufacturing defects in material and workmanship that develop in the service for which they are designed, provided the products are installed and used in accordance with all applicable instructions and limitations issued by Cla-Val. Electronic components manufactured by Cla-Val are warranted for one year from the date of shipment.

We will repair or replace defective material, free of charge, that is returned to our factory, transportation charges prepaid, if upon inspection, the material is found to have been defective at time of original shipment. This warranty is expressly conditioned on the purchaser's providing written notification to Cla-Val immediate upon discovery of the defect.

Components used by Cla-Val but manufactured by others, are warranted only to the extent of that manufacturer's guarantee.

This warranty shall not apply if the product has been altered or repaired by others, Cla-Val shall make no allowance or credit for such repairs or alterations unless authorized in writing by Cla-Val.

DISCLAIMER OF WARRANTIES AND LIMITATIONS OF LIABILITY

The foregoing warranty is exclusive and in lieu of all other warranties and representations, whether expressed, implied, oral or written, including but not limited to any implied warranties or merchantability or fitness for a particular purpose. All such other warranties and representations are hereby cancelled.

Cla-Val shall not be liable for any incidental or consequential loss, damage or expense arising directly or indirectly from the use of the product. Cla-Val shall not be liable for any damages or charges for labor or expense in making repairs or adjustments to the product. Cla-Val shall not be liable for any damages or charges sustained in the adaptation or use of its engineering data and services. No representative of Cla-Val may change any of the foregoing or assume any additional liability or responsibility in connection with the product. The liability of Cla-Val is limited to material replacements F.O.B. Newport Beach, California.

TERMS OF SALE

ACCEPTANCE OF ORDERS

All orders are subject to acceptance by our main office at Newport Beach, California.

CREDIT TERMS

Credit terms are net thirty (30) days from date of invoice.

PURCHASE ORDER FORMS

Orders submitted on customer's own purchase order forms will be accepted only with the express understanding that no statements, clauses, or conditions contained in said order form will be binding on the Seller if they in any way modify the Seller's own terms and conditions of sales.

PRODUCT CHANGES

The right is reserved to make changes in pattern, design or materials when deemed necessary, without prior notice.

PRICES

All prices are F.O.B. Newport Beach, California unless expressly stated otherwise on our acknowledgement of the order. Prices are subject to change without notice. The prices at which any order is accepted are subject to adjustment to the Seller's price in effect at the time of shipment. Prices do not include sales, excise, municipal, state or any other Government taxes. Minimum order charge \$100.00.

RESPONSIBILITY

We will not be responsible for delays resulting from strikes, accidents, negligence of carriers, or other causes beyond our control. Also, we will not be liable for any unauthorized product alterations or charges accruing there from.

RISK

All goods are shipped at the risk of the purchaser after they have been delivered by us to the carrier. Claims for error, shortages, etc., must be made upon receipt of goods.

EXPORT SHIPMENTS

Export shipments are subject to an additional charge for export packing.

RETURNED GOODS

- Customers must obtain written approval from Cla-Val prior to returning any material.
- 2. Cla-Val reserves the right to refuse the return of any products.
- 3. Products more than six (6) months old cannot be returned for credit.
- 4. Specially produced, non-standard models cannot be returned for credit.
- Rubber goods such as diaphragms, discs, o-rings, etc., cannot be returned for credit, unless as part of an unopened vacuum sealed repair kit which is less than six months old.
- Goods authorized for return are subject to a 35% (\$100 minimum) restocking charge and a service charge for inspection, reconditioning, replacement of rubber parts, retesting, repainting and repackaging as required.
- Authorized returned goods must be packaged and shipped prepaid to Cla-Val, 1701 Placentia Avenue, Costa Mesa, California 92627.



CLA-VAL

PO Box 1325 Newport Beach CA 92659-0325 Phone: 949-722-4800 • Fax: 949-548-5441

CLA-VAL CANADA 4687 Christie Drive Beamsville, Ontario

Canada LOR 1B4
Phone: 905-563-4963
Fax: 905-563-4040
«COPYRIGHT CLA-VAL 2011 Printed in USA
Specifications subject to change without notice.

CLA-VAL EUROPE

Chemin dés Mesanges 1 CH-1032 Romanel/ Lausanne, Switzerland Phone: 41-21-643-15-55 Fax: 41-21-643-15-50

www.cla-val.com

Represented By:



-MODEL- REPAIR KITS

Model 100-01 Hytrol Main Valve

| | BUNA-N MATERIAL | | | | | | | |
|---------------|--|-----------|-----------|-----------|--|--|--|--|
| | RUBBER KIT REPAIR KIT REBUILD KIT STUD & NUT KIT | | | | | | | |
| | STOCK NO. | STOCK NO. | STOCK NO. | STOCK NO. | | | | |
| 3/8" | 9169801K | | 21176614B | 21176633J | | | | |
| 1/2" | 9169802H | 21176602F | 21176615A | 21176634H | | | | |
| 3/4" | 9169802H | 21176602F | 21176615A | 21176634H | | | | |
| 1" Non-Guided | 9169803F | 21176601G | 21176616K | 21176636F | | | | |
| 1" | 9169804D | 21176603E | 21176617J | 21176636F | | | | |
| 1 1/4" | 9169804D | 21176603E | 21176617J | 21176636F | | | | |
| 1 1/2" | 9169804D | 21176603E | 21176617J | 21176636F | | | | |
| 2" | 9169805A | 21176608K | 21176618H | 21176637E | | | | |
| 2 1/2" | 9169811J | 21176609J | 21176619G | 21176638D | | | | |
| 3" | 9169812G | 21176604D | 21176620D | 21176639C | | | | |
| 4" | 9169813E | 21176605C | 21176621C | 21176640K | | | | |
| 6" | 9169815K | 21176606B | 21176622B | 21176641J | | | | |
| 8" | 9817901D | 21176607A | 21176623A | 21176642H | | | | |
| 10" | 9817902B | 21176610F | 21176624K | 21176643G | | | | |
| 12" | 9817903K | 21176611E | 21176625J | 21176644F | | | | |
| 14" | 9817904H | 21176612D | 21176626H | 21176645E | | | | |
| 16" | 9817905E | 21176613C | 21176627G | 21176645E | | | | |

Model 100-20 Hytrol Main Valve

| BUNA-N MATERIAL | | | | | | | |
|-----------------|--|-----------|-----------|-----------|--|--|--|
| | RUBBER KIT REPAIR KIT REBUILD KIT STUD 8 | | | | | | |
| | STOCK NO. | STOCK NO. | STOCK NO. | STOCK NO. | | | |
| 3" | 9169805A | 21176608K | 21176618H | 21176637E | | | |
| 4" | 9169812G | 21176604D | 21176620D | 21176639C | | | |
| 6" | 9169813E | 21176605C | 21176621C | 21176640K | | | |
| 8" | 9169815K | 21176606B | 21176622B | 21176641J | | | |
| 10" | 9817901D | 21176607A | 21176623A | 21176642H | | | |
| 12" | 9817902B | 21176610F | 21176624K | 21176643G | | | |
| 14" | 9817903K | 21176611E | 21176625J | 21176644F | | | |
| 16" | 9817903K | 21176611E | 21176625J | 21176644F | | | |

Consult factory for larger sizes

Rubber Kit Includes: Diaphragm, Disc, Spacer Washers

Repair Kit Includes: Diaphragm, Disc, Spacer Washers, Epoxy Coated Disc Retainer, Epoxy Coated Diaphragm Washer,

Protective Washer

Rebuild Kit Includes: Diaphragm, Disc, Spacer Washers, Epoxy Coated Disc Retainer, Epoxy Coated Diaphragm Washer,

Protective Washer, Stainless Steel Bolts & Washers (6" & Below),

Stainless Steel Studs, Nuts, & Washers (8" & Above), Stem, Stem Nut, Disc Guide

Stud & Nut Kit Includes: Stainless Steel Bolts & Washers (6" & Below), Stainless Steel Studs, Nuts, & Washers (8" & Above)

Repair Kits for 100-02/100-21 Powertrol and 100-03/100-22 Powercheck Main Valves

For: Powertrol and Powercheck Main Valves-150 Pressure Class Only

Includes: Diaphragm, Disc (or Disc Assembly) and O-rings and full set of spare Spacer Washers.

| Valve | Kit Stock Number | Valve | Kit Stock Number | |
|---------------|------------------|-------|------------------|-----------------|
| Size | 100-02 | Size | 100-02 & 100-03 | 100-21 & 100-22 |
| 3/8" | 9169901H | 2½" | 9169910J | N/A |
| 1/2" & 3/4" | 9169902F | 3" | 9169911G | 9169905J |
| 1" | 9169903D | 4" | 9169912E | 9169911G |
| 11/4" & 11/2" | 9169904B | 6" | 9169913C | 9169912E |
| 2" | 9169905J | 8" | 99116G | 9169913C |
| | | 10" | 9169939H | 99116G |
| | | 12" | 9169937B | 9169939H |

Repair Kits for 100-04/100-23 Hy-Check Main Valves

For: Hy-Check Main Valves—150 Pressure Class Only

Includes: Diaphragm, Disc and O-Rings and full set of spare Spacer Washers.

| Valve | Kit Stock Number | | Valve | Kit Stock Number | |
|-------|------------------|-----------|-------|------------------|-----------|
| Size | 100-04 | 100-23 | Size | 100-04 | 100-23 |
| 4" | 20210901B | N/A | 12" | 20210905H | 20210904J |
| 6" | 20210902A | 20210901B | 14" | 20210906G | N/A |
| 8" | 20210903K | 20210902A | 16" | 20210907F | 20210905H |
| 10" | 20210904J | 20210903K | 20" | N/A | 20210907F |
| | | | 24" | N/A | 20210907F |

Larger Sizes: Consult Factory.

Larger Sizes: Consult Factory.

Repair Kits for Pilot Control Valves (In Standard Materials Only)

Includes: Diaphragm, Disc (or Disc Assembly), O-Rings, Gaskets or spare Screws as appropriate.

| | BUNA-N® (Stan | VITON (For KB Controls) | | | |
|------------|---------------|-------------------------|-----------|-------------------------------|-----------|
| Pilot | Kit Stock | Pilot | Kit Stock | Pilot | Kit Stock |
| Control | Number | Control | Number | Control | Number |
| CDB | 9170006C | CFM-9 | 12223E | CDB-KB | 9170012A |
| CDB-30 | 9170023H | CRA (w/bucking spring) | 9170001D | CRA-KB | N/A |
| CDB-31 | 9170024F | CRD (w/bucking spring) | 9170002B | CRD-KB (w/bucking spring) | 9170008J |
| CDB-7 | 9170017K | CRD (no bucking spring) | 9170003K | CRL-KB | 9170013J |
| CDH-2 | 18225D | CRD-18 | 20275401K | CDHS-2BKB | 9170010E |
| CDHS-2 | 44607A | CRD-22 | 98923G | CDHS-2FKB | 9170011C |
| CDHS-2B | 9170004H | CRL (55F, 55L) | 9170007A | CDHS-18KB (no bucking spring) | 9170009G |
| CDHS-2F | 9170005E | CRL60/55L-60 | 9170033G | 102C-KB | 1726202D |
| CDHS-3C-A2 | 24657K | CRL60/55L60 1" | 9170042H | | |
| CDHS-8A | 2666901A | CRL-4A | 43413E | | |
| CDHS-18 | 9170003K | CRL-5 (55B) | 65755B | | |
| CDS-4 | 9170014G | CRL-5A (55G) | 20666E | | |
| CDS-5 | 14200A | CRL-18 | 20309801C | | |
| CDS-6 | 20119301A | Universal CRL | 9170041K | | |
| CDS-6A | 20349401C | CV | 9170019F | | |
| CFCM-M1 | 1222301C | X105L (O-ring) | 00951E | Buna-N® | |
| CFM-2 | 12223E | 102B-1 | 1502201F | | |
| CFM-7 | 1263901K | 102C-2 | 1726201F | CRD Disc Ret. (Solid) | C5256H |
| CFM-7A | 1263901K | 102C-3 | 1726201F | CRD Disc Ret. (Spring) | C5255K |

Repair Assemblies (In Standard Materials Only)

| • | | |
|-------------|--|--------------|
| Control | Description | Stock Number |
| CF1-C1 | Pilot Assembly Only | 89541H |
| CF1-CI | Complete Float Control less Ball and Rod | 89016A |
| CFC2-C1 | Disc, Distributor and Seals | 2674701E |
| CSM 11-A2-2 | Mechanical Parts Assembly | 97544B |
| CSM 11-A2-2 | Pilot Assembly Only | 18053K |
| 33A 1" | Complete Internal Assembly and Seal | 2036030B |
| 33A 2" | Complete Internal Assembly and Seal | 2040830J |

When ordering, please give complete nameplate data of the valve and/or control being repaired. MINIMUM ORDER CHARGE APPLIES